

Security Alarm System User Manual



EMERGENCY KEYS:



Press [2] second to generate a FIRE



Press [2] second to generate a AUXILIARY



Press [2] second to generate a PANIC

Arming & Disarming the System

Arming (Turning On/Setting)

Close all sensors (i.e. stop motion and close doors). The Ready (✓) indicator should be on. To arm, press and hold the Away key (🏠) for 2 seconds and/or enter your Access Code, or press to (*) (0) Quick Arm. During the setting state (exit delay active) the Armed (🔒) and Ready (✓) indicators will turn on, and the keypad will sound one beep per second. You now have ____ seconds to leave the premises (please check with your installer to have this time programmed). To cancel the arming sequence, enter your access code.

Away Arming (Turned On/Set)

When the exit delay is completed, the alarm system is armed/set and this is indicated on the keypad as follows: the Ready (✓) indicator will turn off, the Armed indicator will remain on and the keypad will stop sounding.

Quick Exit

If the system is armed and you need to exit, use the Quick Exit function to avoid disarming and rearming the system. Press and hold the Quick Exit (🚪) key for 2 seconds or press (*) (0). You now have 2 minutes to leave the premises through your exit door. When the door is closed again, the remaining exit time is cancelled.

Stay Arming (Partially Turning On / Part Setting)

Stay arming will bypass the interior protection (i.e. motion sensors) and arm the perimeter of the system (i.e. doors and windows). Close all sensors (i.e. stop motion and close doors). The Ready (✓) indicator should be on. Press and hold the Stay key (🏠) for 2 seconds. During the setting state (exit delay active), the Armed (🔒) and Ready (✓) indicators will turn on, and the keypad will sound one beep every three seconds. When the exit delay is completed, the alarm system is armed/set and this is indicated on the keypad as follows: the Ready (✓) indicator will turn off, the Armed (🔒) indicator will remain on and the keypad will stop sounding. The Armed (🔒) indicator and Bypass or System indicator will turn on. The system will automatically bypass certain interior sensors (i.e. motion sensors).

Disarming (Turning Off/Unsetting)

Enter your access code to disarm anytime the system is armed (Armed (🔒) indicator is on). The keypad will beep if you walk through the entry door. Enter your code within ____ seconds to avoid an alarm condition.

Change Master Code

Press [*][5], enter your current master code, enter [40], then enter the new master code [4 digits], enter [#] to exit programming.

Time & Date Programming

Press [*][6] plus your Master Access Code, Press[1] to select Time and Date. Enter the time in 24-hr format (HH:MM), followed by the date (MM: DD: YY). Press [#] to exit programming.

Door Chime

Press Chime Button or Press [*][4].